


Instruction Sheet

This kit fits most hand trucks and carts with 16mm (5/8") diameter OEM axles ONLY!

Parts:

- a) Axle Extenders (2)
- b) Plastic Wheel Spacers (2)
- c) Hex Bolts - (4)
- d) Flat Washers (4)
- e) Nylock Nuts (4)
- f) Quick Clip Pins (4)
- g) Backing Washers - Non-Slotted (2)*
- h) Backing Washers - Slotted (2)*
- i) WZ1-30UC Wheels (2)

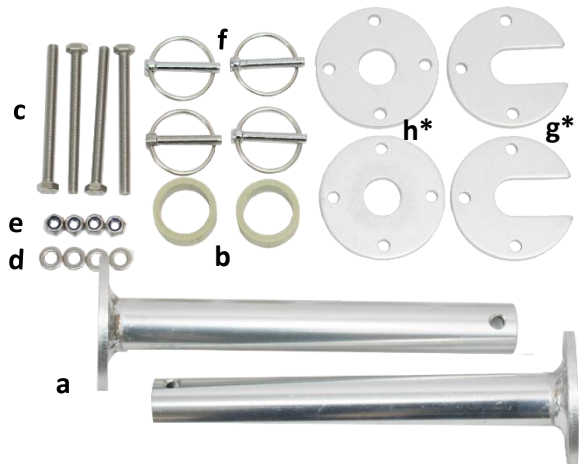


1. Remove stock wheels from wagon.



2. Install axles (a), with plastic spacers (b) over original axle. Install bolts (c), backing washers (g,h)*, washers (d) and nuts (e) - tighten securely.



* Kit includes (2) Slotted washers and (2) non-slotted washers. Use slotted where OEM axle extends past axle support on the inner surface.

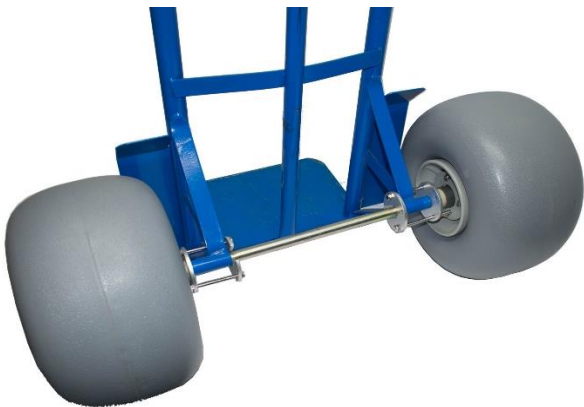

3. Install wheels (i) and QCP (f).



**Maximum Payload With Wheeliez® Balloon Wheels - 110 kg (240 lbs)
However, DO NOT EXCEED Hand Truck Manufacturers Payload Limit**

View installation video at www.wheeliez.com/

